


STRONGBOY MASONRY WALL SUPPORT

User Guide

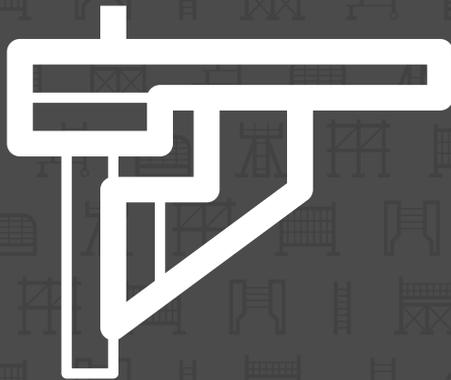

GENERATION
HIRE & SALE

LW.LH/10.21

Altrad Generation

Shaping The Future Of Construction & Industry.



Altrad Generation is one of the largest suppliers of Scaffolding, Temporary Fencing and Access. Also supplying to multiple sectors in Groundworks, Safety, Edge Protection and within Ireland, formwork and falsework.

OUR CUSTOMER PROMISE IS TO DELIVER:

1

BEST QUALITY

We work in partnership with our suppliers to ensure we deliver consistent quality every time. We guarantee that our hire and sales products will meet and conform or exceed all statutory requirements and not let you down.

2

BEST AVAILABILITY

We have the largest available inventory of temporary fencing, water filled and pedestrian barrier products. Our branch network and delivery fleet will ensure that we deliver what you need, when you need it.

3

BEST PARTNERSHIP

We provide a full range of engineering, design and business services to partner and work with our customers. Talk to us today about how we can help you to grow your business.

4

BEST PRICES

We use our position as the largest supplier of scaffolding, fencing and access products to negotiate the best rates for you. We guarantee you will get the best value products and service when you hire or buy from us.



User Guide - Strongboy Masonry Support

Prior to using any Strongboy masonry support, you should identify that this is a suitable method to carry out the intended works. If in doubt, consult a structural engineer.

You must correctly identify all loading that the Strongboys will have to support. The total load may simply be the masonry above the opening, but it will also include loads from a floor and/or a roof that is supported by the wall. Floor loading may need to include any heavy furniture in an upstairs room, a full bath, people walking on the supported floor, etc. Roof loading includes supported timbers/steelwork, roof tiles, loft mounted water tanks and the like.

It is recommended that only one single opening in any one length of wall be created at any given time.

You should check that the wall masonry and any floor/roof timbers are in good condition prior to any work being carried out as remedial work may be needed prior to the opening being altered or created.

Strongboy Masonry support is not recommended to be used to provide temporary support to unstable structures.

You should obtain competent structural engineering advice if there is any doubt about the condition of the structure or the nature of the loading, or if any unusual loads are suspected.

User Guide - Strongboy Masonry Support

Mark the wall in the correct position where the Strongboy is to be inserted.

Scrape or grind out the mortar, or remove a brick prior to insertion of the Strongboy in the identified position. Always ensure the underside of the brick to be supported is clean and will sit flat on the blade of the Strongboy.

The Strongboy is designed for use with standard telescopic screw props with a 6" x 6" (150 x 150mm) head. Strongboys should not be used on struts as these have a much smaller head. The prop should only be placed on firm, flat, compacted ground that is capable of supporting the load. A sole board should be placed under each prop - eg 18" x 9" x 1½" (450 x 225 x 36mm)

Hold prop vertically upright with one hand close to where the intended usage is.

With your other hand holding the supporting web, tilt leading edge of Strongboy blade up approximately 30 degrees.

Slide the rear end of the Strongboy over the top plate of the prop and hook the retaining bar at the rear end of the Strongboy over the prop plate.

Lower the leading edge of the Strongboy blade until the web bracket is located against the vertical tube of the plate and the blade of the Strongboy is horizontal.

To check the Strongboy is correctly engaged, pull the front edge of the blade down. The Strongboy should not move.

The Strongboy may now be manoeuvred into the correct position for use. Insert the blade into the mortar space or brick hole until the blade is at least at the same depth as the rear of the brick on the leaf of the wall which is intended to be supported. Where possible the Strongboy should be inserted until the tip of the web is nearly touching the wall.

Ensuring the prop remains completely vertical and in plumb, tighten the collar of the prop until the Strongboy and prop are fully engaged with the wall and do not move. Do not over tighten as that may cause the blade to bend. Hand tight is generally sufficient. Over tightening may damage the brickwork and the prop and Strongboy and may cause the blade to slide out of the brickwork.

User Guide

When using Strongboys we recommend:

Maximum load bearing capacity of 340 Kgs per unit (750lb).

Maximum safe working height 3 metres from firm base.

The distance between props should be calculated from the assessment of the loading, but in any case, it should not exceed 3ft or 900mm.

Always have the loadings checked and use the correct number of Strongboys for the job. If in doubt, you should obtain competent structural engineering advice.

If the width of the intended opening is greater than 4m we recommend that the props be horizontally laced and diagonal braced together using scaffolding poles and proprietary couplings.

The Strongboy can be used on single or double skin walls where each leaf is up to 4 ½" (112mm) thick. If double skin, the maximum cavity is 2" (50mm). Ensure the blade of the Strongboy is fully supporting the second skin.

Check that the prop is not working loose on a regular basis – eg continuously while the opening is being made, otherwise daily. Arrange the work so that the Strongboys and props are not knocked or displaced. If this could happen then lacing and bracing using scaffold poles and fittings can help prevent accidental movement (standard fittings onto the prop inner tube and 68.3mm fittings onto the outer tube).

Disclaimer & Copyright

Disclaimer

Whilst Generation (UK) Ltd has taken every reasonable effort to ensure the information contained within this publication is correct and complete at the time of printing, you should be aware that there will be periodical changes and Generation (UK) Ltd does not accept any liability for any inconvenience, loss or damage caused as a result of any inaccuracy or omission within this publication.

Copyright

No unauthorised reproduction of any images, text or other matter contained herein is permitted. All rights are expressly reserved, including copyright, design right, moral and patent rights (where applicable). We reserve the right to take legal action in respect of any infringement of said rights.

SCOTLAND

Dundee	01382 227 552
Edinburgh (E)	0131 552 7534
Edinburgh (W)	01506 863 864
Glasgow (E)	0141 810 8350
Glasgow (S)	0141 647 6969
Salsburgh	01698 870 200

NORTH EAST

Gateshead	0191 490 6866
Newcastle	0191 492 1190

NORTH WEST

Manchester	0161 477 0131
Widnes	0151 420 3331

YORKSHIRE

Leeds (SE)	0113 277 8822
Leeds (SW)	0113 387 0630
Rotherham	01709 554 149

EAST MIDLANDS

Brigg	01652 601 390
Northampton	01604 580 444
Raunds	01933 462190
Nottingham	0115 946 7660
Peterborough	01733 890009

WEST MIDLANDS

Birmingham (N)	0121 366 7840
Birmingham (E)	0121 706 0000
Birmingham (W)	0121 544 3355

WALES

Cardiff	029 2046 3835
Cardiff Docks	029 2079 1188

EAST ANGLIA

Kings Lynn	01553 771 465
Norwich	01603 309 010

SOUTH EAST

Chelmsford	01277 841 670
Chichester	01243 558 290
Croydon	0208 6896044
Frimley	01252 838 696
Grays	01375 312 120
London (E)	020 7473 6056
Luton	01582 491000
London (W)	01895 527666
West Thurrock	020 7476 4760
Reading Coming Soon	

SOUTH WEST

Bournemouth	01202 591255
Bristol (E)	0117 972 4550
Bristol (W)	0117 972 3353
Truro	01872 870078

IRELAND

Cork	+ 353 21 4866400
Dublin (N)	+ 353 1 9018690
Dublin (W)	+ 353 1 6011500
Galway	+ 353 93 60470

SCAN ME
TO FIND



YOUR LOCAL
BRANCH



GENERATION
HIRE & SALE

Generation UK Ltd.
Generation Head Office, Trinity Street, Off Tat Bank Road, Oldbury, West Midlands, B69 4LA - United Kingdom
Tel. 0121 543 2950 - Fax. 0121 543 2953 - enquiries@generationuk.co.uk
www.altradgeneration.com