



GROUNDWORKS

ADJUSTABLE SHUTTERS

User Guide



HIRE & SALES

BH/07.26

Altrad Hire & Sales

Support for Construction & Industry



Altrad Hire & Sales is the UK's leading supplier of: Scaffolding, Temporary Fencing, Light Access, Edge Protection, Safety Decking and Groundworks for hire and sale.

OUR **CUSTOMER COMMITMENT** IS TO DELIVER:



BEST QUALITY

We work closely with our suppliers to ensure consistent product quality every time. All our products are specified to meet or exceed statutory requirements, verified by our Quality Assurance team.



BEST AVAILABILITY

Our nationwide branch network, transport fleet and stock holding ensure we can supply your equipment needs. What, When and Where you need equipment.



BEST PARTNERSHIP

We can take care of all your equipment needs; supplemented by a full range of engineering, design, specification and business services. Our focus is to work together, supporting the growth of your business.



BEST VALUE





Our global supply chain, purchasing and lean business means we don't pass on unnecessary costs to you. We aim to provide consistently low prices and the best value when you buy or hire from us.

Adjustable Steel Manhole Shutters

Altrad Hire & Sales Groundworks Hires Adjustable Steel Manhole Shutters are intended to be used as a temporary circular formwork shutter to support the placement of an insitu concrete surround of uniform thickness to pre-cast concrete manhole rings. They accommodate all standard sizes of manhole rings using a combination of 3 panel types, A, B and C. There are two panel heights, 900mm and 1800mm.

Identification of Components and Dimensions

Panel Type	Width (mm)	900mm High Panel	1800mm High Panel
		Weight (kg)	Weight (kg)
A	1530	27.5	55
B	620	12.5	25
C	250	6.0	12

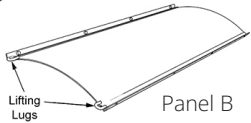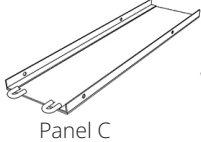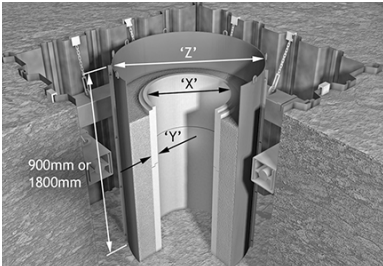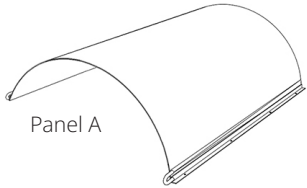


"X" Nominal Internal Diameter of Manhole (mm)	"Y" Thickness (mm)	Number of Sections Required to Form Shutter			"Z" External Diameter of Concrete (mm)	Theoretical Thickness of Concrete (mm)	Volume of Concrete Surround (m³)	
		A	B	C			900	1800
675	65	2	1	0	1171	182	0.51	1.02
900	75	2	2	0	1368	159	0.54	1.09
1050	85	3	0	1	1541	160	0.63	1.25
1200	100	3	1	1	1738	169	0.75	1.50
1350	112	3	2	0	1855	141	0.68	1.36
1350	112	3	2	1	1935	181	0.90	1.80
1500	115	4	0	1	2028	150	0.79	1.58
1500	115	4	0	2	2107	189	1.02	2.05
1800	115	4	2	0	2342	156	0.96	1.93
2100	120	5	1	0	2632	146	1.03	2.05
2100	120	5	1	1	2712	186	1.33	2.66
2400	135	6	0	1	3002	166	1.33	2.66
2700	162	6	2	0	3316	146	1.31	2.62
2700	162	6	2	1	3396	186	1.69	3.38
3000	210	7	1	1	3686	133	1.34	2.68
3000	210	7	2	0	3800	190	1.94	3.89

Stacking and Handling

The Shutter Sections are normally supplied coated with a concrete release agent to help protect against concrete contamination. It is recommended that protective gloves be worn when handling or slinging the Shutters. Unloading and slinging operations should be carried out by experienced and competent personnel using suitable plant and lifting equipment when required. Each Shutter is provided with 2 Lifting Lugs. Assembled panels should be lifted with chains and load spreaders to avoid distortion. Manhole Shutters are extremely flexible. Lorry drivers must ensure that adequate precautions are taken to secure to the lorry bed.

Stacking of Shutters is illustrated below.

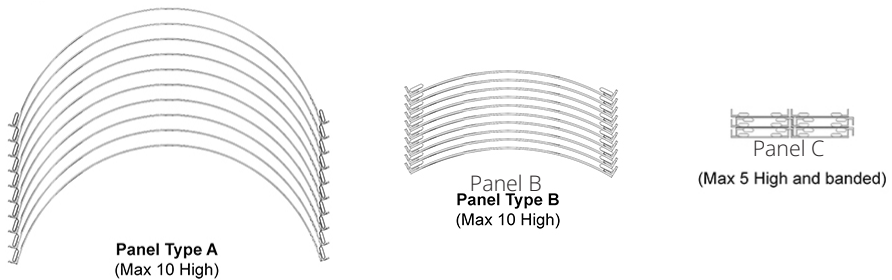

Usage

The Shutters are intended to provide up to 190mm thickness of concrete around the external diameter of pre-cast rings. They **MUST NOT BE USED** to form in-situ concrete cover greater than this thickness. The Shutters are not intended for multiple height pours. **DO NOT** attempt to mount one set of shutters on top of another set to achieve additional pouring height .

Altrad Hire & Sales Manhole Shutters are not compatible with similar products from other suppliers. They should therefore be stored and used separately. Before use check that each Shutter has its full complement of pins and wedges. One side of the Shutter should have a pin by each connector hole, the other side a wedge. Ensure that all the wedges at each joint are correctly engaged before concrete is poured. The wedges are made captive by a single hammer blow from above. **DO NOT** use excessive force to tighten each flange joint.

During usage periodically check:

- There are no splits or holes in the pan or main body of each Shutter.
- That the connector holes are intact and not split at the outer edge.
- That the lifting lugs have not been damaged.
- That the pins and wedges are kept clean from concrete allowing easy striking and reforming of the panels.
- That the flange faces of each connection are free from concrete therefore allowing a flush and tight flange connection and are not distorted.

GROUNDWORKS BRANCHES NATIONWIDE



0800 043 8484

Glasgow South

Tel: 01696 870000

Email: glasgowgs@altrad.com

Widnes

Tel: 0151 430 1111

Email: widnesws@altrad.com

Birmingham North

Tel: 0121 366 7840

Email: birminghamnorthgw@altrad.com

Cardiff Docks

Tel: 02920 674 190

Email: cardiffdocks@altrad.com

Reading

Tel: 01252 838696

Email: readinggw@altrad.com

London East

Tel: 01375 117 130

Email: londonwest.gw@altrad.com



HIRE & SALES

Altrad Hire & Sales UK Head Office
Trinity Square, Off Tar River Road, Dillbury, R94 8 JX
Tel: 0121 549 3490
groundworks.enquiries@altrad.com
www.altradriveways.co.uk